

3 Press ENTER.**4 Use the ↑/↓ (cursor up/down) buttons to select a room type then press ENTER.**

Choose one of the following depending on your room size:

- **S** – Smaller than average room
- **M** – Average room
- **L** – Larger than average room

5 Use the ↑/↓ (cursor up/down) buttons to select a seating position setting, then press ENTER.

Choose one of the following depending on where your main listening position is:

- **Fwd** – If you are nearer to the front speakers than the surround speakers
- **Mid** – If you are equal distance from the front and surround speakers
- **Back** – If you are nearer to the surround speakers than the front speakers

**Note**

- The Room Setup automatically sets up channel levels and channel delay. If you have already set the channel levels manually (see *Setting the channel levels* on page 62), you will see **Room Set?** in the display when you first press the **ROOM SETUP** button. If you continue, the previous settings will be overwritten.

Setting up the remote to control your TV

You can set up the supplied remote to control your TV using the **TV CONTROL** buttons.

1 Switch on your TV.**2 Find the name of the manufacturer of your TV in the Preset Code List on page 83.**


Next to each manufacturer is one or more three digit codes. These tell the remote what kind of TV you have.


If the name of the manufacturer of your TV does not appear in the table, you won't be able to set up this remote to control your TV. Note that there are also cases where the preset codes listed for a manufacturer in the table may not work for your TV.

3 Point the remote at your TV, hold down the CLEAR button, then enter the three digit code for your TV.

The remote transmits an on/off signal to the TV. If you've entered the correct code, your TV should switch off.

If your TV doesn't turn off, repeat the procedure using the next code in the list until your TV switches off successfully. Once set, you can then use the individual TV controls shown below.

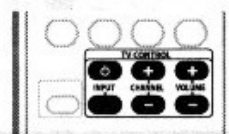

Button	What it does
	Switches your TV on or into standby.
CHANNEL +/-	Changes the TV channel.
VOLUME +/-	Adjusts the volume.
INPUT	Switches the TV's input between the built in TV tuner and an external video source.

**Note**

- The default setting is for a Pioneer TV.

Preset code list

Please note that there are cases where only certain functions may be controllable after assigning the proper preset code, or the codes for the manufacturer in the list will not work for the model that you are using.

ACURA 644	FRONTECH/PROTECH 632	MANESTH 639, 646	SAMBERS 649
ADMIRAL 631	FUJITSU 648, 629	MARANTZ 607	SAMSUNG 607, 638, 644, 646
AIWA 660	FUNAI 640, 646, 658	MARK 607	SANYO 635, 645, 648, 621, 614
AKAI 632, 635, 642	GBC 632, 642	MATSUI 607, 639, 640, 642, 644, 647, 648	SBR 607, 634
AKURA 641	GE 601, 608, 607, 610, 617, 602, 628, 618	MEDIATOR 607	SCHAUB LORENZ 642
ALBA 607, 639, 641, 644	GEC 607, 634, 648	MEMOREX 644	SCHNEIDER 607, 641, 647
AMSTRAD 642, 644, 647	GELOSO 632, 644	METZ 631	SEG 642, 646
ANITECH 644	GENEXXA 631, 641	MINERVA 631, 653	MCMICHAEL 634
ASA 645	GOLDSTAR 610, 623, 621, 602, 607, 650	MITSUBISHI 609, 610, 602, 621, 631	SEI 632, 640, 649
ASUKA 641	GOODMANS 607, 639, 647, 648, 656	MULTITECH 644, 649	SELECO 631, 642
AUDIOGONIC 607, 636	GORENJE 638	NEC 659	SHARP 602, 619, 627
BASIC LINE 641, 644	GPM 641	NECKERMANN 631, 607	SIAREM 632, 649
BAUR 631, 607, 642	GRAETZ 631, 642	NEI 607, 642	SIEMENS 631
BEKO 638	GRANADA 607, 635, 642, 643, 648	NIKKAI 605, 607, 641, 646, 648	SINUDYNE 632, 639, 640, 649
BEON 607	GRADIENTE 630, 657	NOBLIKO 649	SKANTIC 643
BLAUPUNKT 631	GRANDIN 618	NOKIA 632, 642, 652	SOLAVOX 631
BLUE SKY 641	GRUNDIG 631, 653	NORDMENDE 632, 636, 651, 652	SONOKO 607, 644
BLUE STAR 618	HANSEATIC 607, 642	OCEANIC 631, 632, 642	SONOLOR 631, 635
BPL 618	HCM 618, 644	ORION 632, 607, 639, 640	SONTEC 607
BRANDT 636	HINARI 607, 641, 644	OSAKI 641, 646, 648	SONY 604
BTC 641	HISAWA 618	OSO 641	SOUNDWAVE 607
BUSH 607, 641, 642, 644, 647, 656	HITACHI 631, 633, 634, 636, 642, 643, 654, 606, 610, 624, 625, 618	OTTO VERSAND 631, 632, 607, 642	STANDARD 641, 644
CASCADE 644	HUANYU 656	PALLADIUM 638	STERN 631
CATHAY 607	HYPSON 607, 618, 646	PANAMA 646	SUSUMU 641
CENTURION 607	ICE 646, 647	PANASONIC 631, 607, 608, 642, 622	SYSLINE 607
CGB 642	IMPERIAL 638, 642	PATHO CINEMA 642	TANDY 631, 641, 648
CIMLINE 644	INDIANA 607	PAUSA 644	TASHIKO 634
CLARIVOX 607	INGELEN 631	PHILCO 632, 642	TATUNG 607, 648
CLATRONIC 638	INTERFUNK 631, 632, 607, 642	PHILIPS 631, 607, 634, 656	TEC 642
CONDOR 638	INTERVISION 646, 649	PHOENIX 632	TELEAVIA 636
CONTEC 644	ISUKAI 641	PHONOLA 607	TELEFUNKEN 636, 637, 652
CROSLEY 632	ITC 642	PROFEX 642, 644	TELETECH 644
CROWN 638, 644	ITT 631, 632, 642	PROTECH 607, 642, 644, 646, 649	TENSAI 640, 641
CRYSTAL 642	JEC 605	QUELLE 631, 632, 607, 642, 645, 653	THOMSON 636, 651, 652, 663
CYBERTRON 641	JVC 613, 623	R-LINE 607	THORN 631, 607, 642, 645, 648
DAEWOO 607, 644, 656	KAISUI 618, 641, 644	RADIOLA 607	TOMASHI 618
DAINICHI 641	KAPSCH 631	RADIOHACK 610, 623, 621, 602	TOSHIBA 605, 602, 626, 621, 653
DANSAI 607	KENDO 642	RBM 653	TOWADA 642
DAYTON 644	KENNEDY 632, 642	RCA 601, 610, 615, 616, 617, 618, 661, 662, 609	ULTRAVOX 632, 642, 649
DECCA 607, 648	KORPEL 607	REDIFFUSION 632, 642	UNIVERSUM 631, 607, 638, 642, 645, 646, 654, 655
DIXI 607, 644	KOYODA 644	REX 631, 646	VESTEL 607
DUMONT 653	LEYCO 607, 640, 646, 648	ROADSTAR 641, 644, 646	VICTOR 613
ELIN 607	LIESENK&TTER 607	SABA 631, 636, 642, 651	VOXSON 631
ELITE 641	LOEWE 607	SAISHO 639, 644, 646	WALTHAM 643
ELTA 644	LUXOR 632, 642, 643	SALORA 631, 632, 642, 643	WATSON 607
EMERSON 642	M-ELECTRONIC 631, 644, 645, 654, 655, 656, 607, 636, 651		WATT RADIO 632, 642, 649
ERRES 607	MAGNADYNE 632, 649		WHITE
FERGUSON 607, 636, 651	MAGNAFON 649		WESTINGHOUSE 607
FINLANDIA 635, 643, 655	MAGNAVOX 607, 610, 603, 612, 629		YOKO 607, 642, 646
FINLUX 632, 607, 645, 648, 653, 654, 655			ZENITH 603, 620
FIRSTLINE 640, 644			PIONEER 600, 631, 632, 607, 636, 642, 651
FISHER 632, 635, 638, 645			
FORMENTI 632, 607, 642			
FRONTECH 631, 642, 646			